

# ASSEMBLY INSTRUCTIONS

FOLDING TENT

ENGLISH



**CARPA - TENT  
VIDEO INSTALLATION  
INSTRUCTIONS** 





# SAFETY INSTRUCTIONS

## INTRODUCTION

Congratulations on the purchase of your new tent. If you have any questions or need advice, please contact your dealer. Your tent can be used for many purposes as a stand at trade fairs and events being one of the most visually impressive advertising formats. Follow the instructions so that you can enjoy your tent for a long time to come.

## IMPORTANT

Read the assembly instructions carefully before using the tent and keep them for later use.

## INDICATION

Read all safety notes and instructions. Failure to comply can result in serious injury.

## INTENDED USE

The article is designed for sun protection and other outdoor use. It is not intended for prolonged use as it is only weather resistant to a certain extent.

## RISK OF DEATH

Never leave children unattended with the packaging material. There is a risk of suffocation.

## RISK OF INJURY

- Check that the item is not damaged or worn before each use.
- Check that all parts are correctly assembled before each use. Improper assembly can impair safety and operation.
- The person setting up the tent is responsible for the safety of the tent.
- Warn people about tension ropes and the risk of tripping over them.
- The tent should only be assembled for the duration of its use and used under supervision.

- Dismantle the tent in winds above 40 km/h (*when you feel the wind, large branches and trees are moving and you can hear the wind clearly*).
- The item must not be used in adverse weather conditions, such as strong wind, rain or snow. Damage caused by wind, rain, snow load or ice formation is not covered by the legal warranty.
- Remember that in moderate winds, the open parts of the tent should be protected from the wind. When the side walls are erected, the vulnerability to wind is greater.
- There is a risk of entrapment at the angle joints when erecting and dismantling the tent. Please note that in this folding tent, high tensile forces characteristic of the construction are applied to the corner joints, and that during dismantling these forces can be released due to the pressure on the locking pins.
- Place the tent on a flat surface.
- The item should only be used under adult supervision and not as a toy.
- There must be no open fires, barbecues or cookers in or near the tent! If the tent catches fire, **get out immediately!** Extinguish the fire with a fire extinguisher or water. If necessary, call the fire brigade immediately.

## ASSEMBLY INSTRUCTIONS

- Open the tent by unfolding the opposite corners slowly and evenly a little at a time.
- Place the roof on the rod. Ensure that the corners of the ceiling are positioned over the corners of the frame rails.
- Spread the frame apart. Push up the joints of each angle until the locking pins of the angle connector engage in the frame.

*Note: If you feel a lot of resistance, this indicates that the tent is not fully extended.*

**Warning: ¡Risk of injury!**

- Remove the telescopic feet from the angle rods. To do this, place one foot on the base plate of the legs and push up the upper part of the angle rod until the telescopic leg audibly clicks into place.

- Place the cover in its final position. Apply the Velcro corner straps. Tighten the cover also using the velcro sewn to the roof.
- Place the base of the legs on the surface of the floor.
- Tie the tension cords with a loop to the outer corners of the cover. Tighten the tension ropes and secure the ends with ground nails in the ground.
- Secure the side walls with the Velcro strips/plastic hooks located on the side walls.

## DISASSEMBLY INSTRUCTIONS

- Unhinge the side walls.
  - Press the locking bolts/ Pull the pull ring out of the telescopic legs so that the legs can be inserted.
  - Press the locking bolts/ Pull the pull ring out of the angle joints to push down the angle joint.
- Warning: ¡Risk of injury!**
- Release the Velcro flaps of the cover, fold back the frame a little and remove the cover.
  - Carefully fold the folding frame completely over on opposite sides.

## CARE AND CLEANING

Clean the item with a damp cloth and a mild detergent. Do not use petrol, solvents or strong detergents.

## ENVIRONMENT

Help protect the environment: do not dispose of the tent and/or its parts in household waste. For recycling, please contact an official collection centre or the manufacturer or an authorised dealer.

## STORAGE

Store the tent dry. The tent should not be folded or packed when wet. If the tent canvas is folded or unfolded in temperatures below +5°C, the fabric may tear. Do not attempt to modify the metal pole, or by extending and/or welding other components. If the structure is stored together with the fabric, the fabric may be damaged.


## WARRANTY AND AFTER-SALES SERVICE

Keep the proof of purchase. The warranty applies to any material defects, e.g. material and manufacturing defects or incorrect deliveries. The warranty does not apply in case of misuse or incorrect handling. Please observe the safety instructions in the installation instructions. In the event of a complaint, please contact your dealer.


Our customer service staff will coordinate the procedure with you as soon as possible. The warranty period will not be extended if you receive parts as a goodwill gesture. After the expiry of the expiry of the warranty period, the necessary spare parts are subject to cost.

## CONTENT


1X TENT STRUCTURE

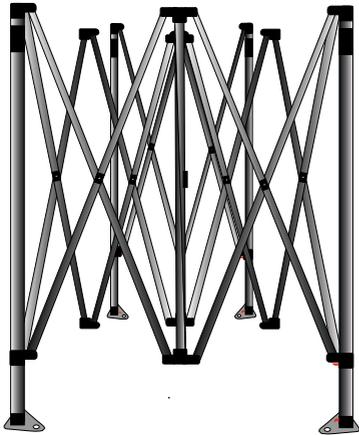


1X CUSTOMISED TENT FABRIC

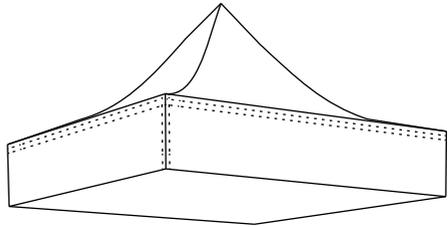


①

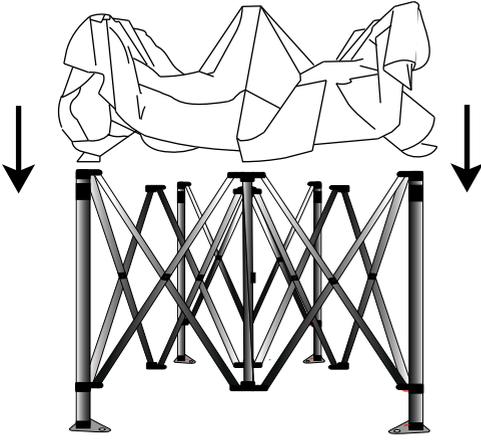

②

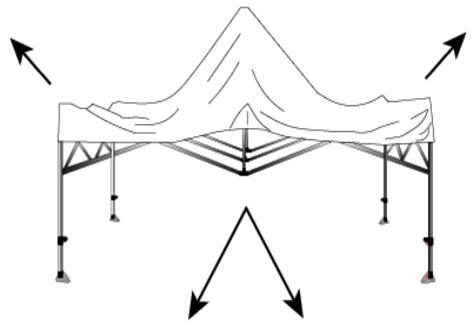

③

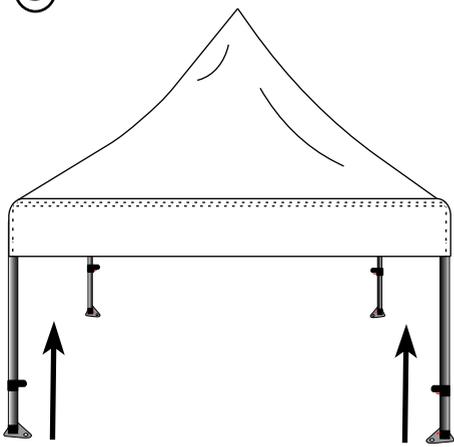

④

